



# DUAL LEG TYPE 1 SELF RETRACTING DEVICE (SRD) INSTALLATION



RDW07A000AY

Meets or exceeds standards and requirements established by:


CSA Z259.2.2-98

ANSI Z359.14-2012

OSHA 1926.502


## 1. Loosen the harness webbing

Pull on the web straps (A) where they pass through the bottom of the dorsal D-Ring (B) until there is some space between the web straps and the back pad.

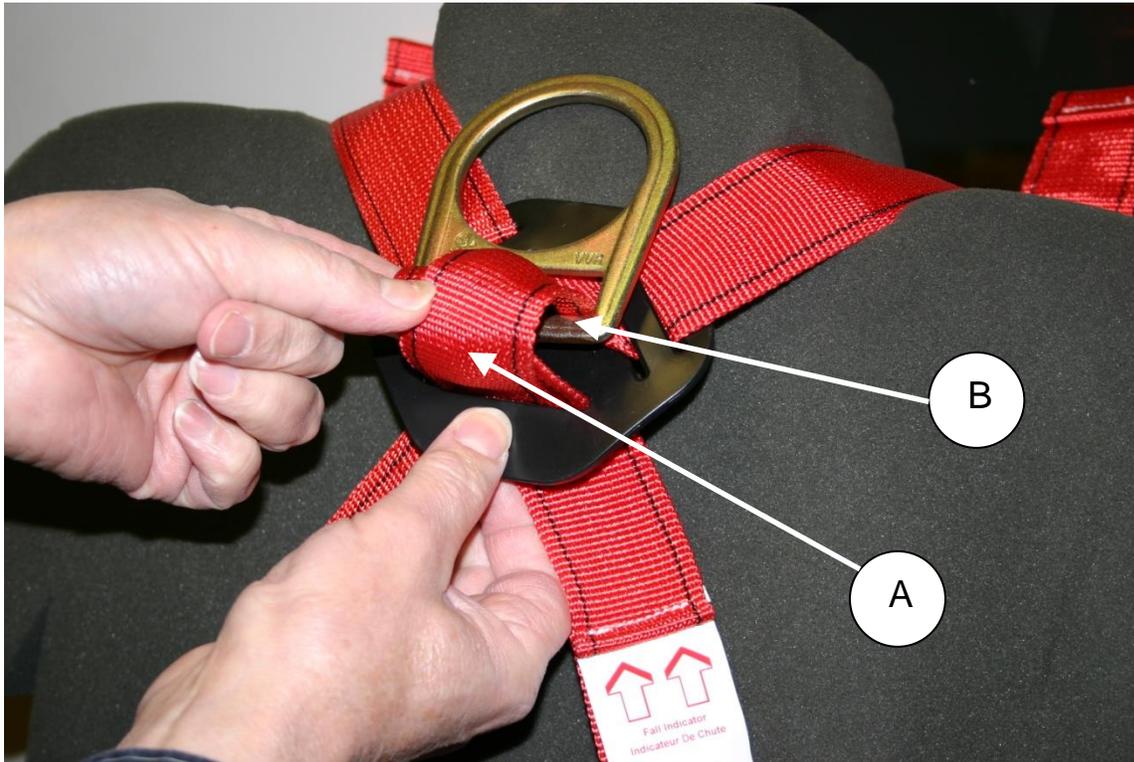

## 2. Open the carabiner


Hold the carabiner with the locking bar (C) at the bottom.

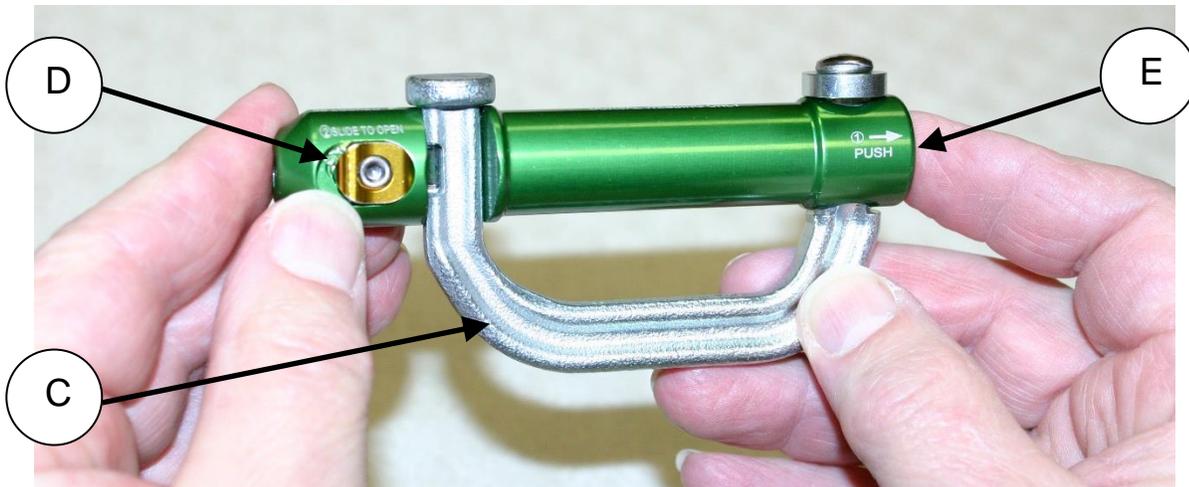

Slide the locking button (D) to the left and hold it to unlock the bar  
Press the release button (E) inward and pivot the bar towards you.


### 3. Insert the carabiner

Insert the barrel of the carabiner (F) into the space between the webbing and back-pad.

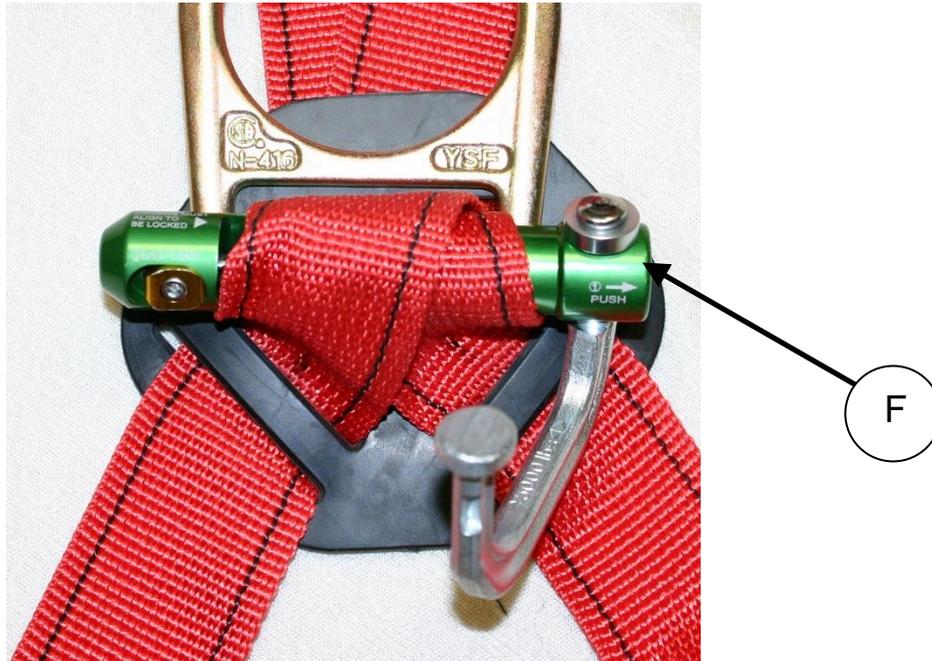


### 4. Attach the SRDs to the carabiner

Insert the locking bar (G) through the swivel eyes (H) on the top of each SRD.

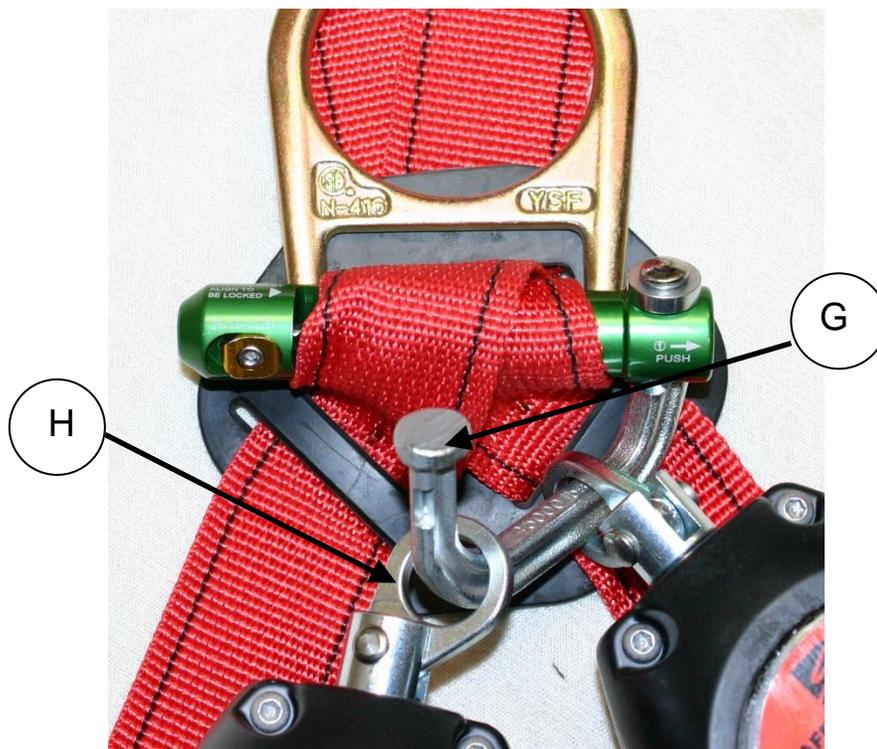

## 5. Close the carabiner

Move the webbing away from the slot and push the locking bar until it clicks. The black bar (I) indicates the carabiner is locked.

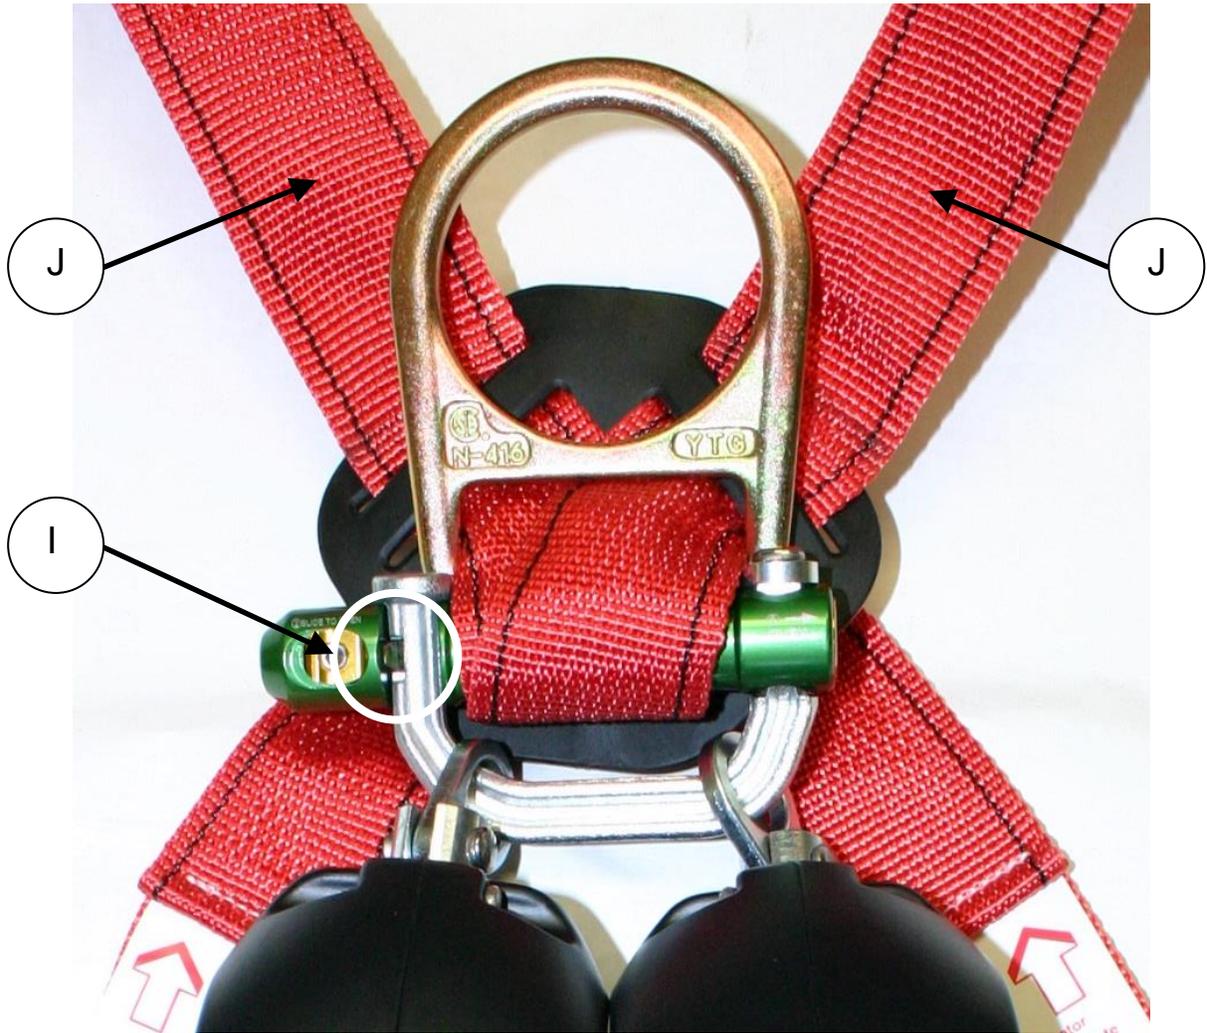

## 6. Adjust the harness

Pull the web straps (J) back through the dorsal D-Ring to remove the slack in the webbing